 


# *Assembly Instructions*

 
## SACHS FLOOR LAMP BASE

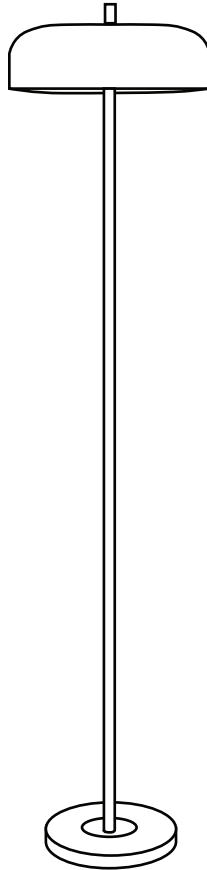

### Component Checklist

REF	A	B	C	D	E	F	G
PART							
NAME	Lamp Base	Lower Pole	Middle Pole	Top Pole	Double Bulb Socket	Head	Finial
QTY	1	1	1	1	1	1	1

**WARNING:** Make sure the lamp is unplugged from the wall socket lamp while changing bulbs.

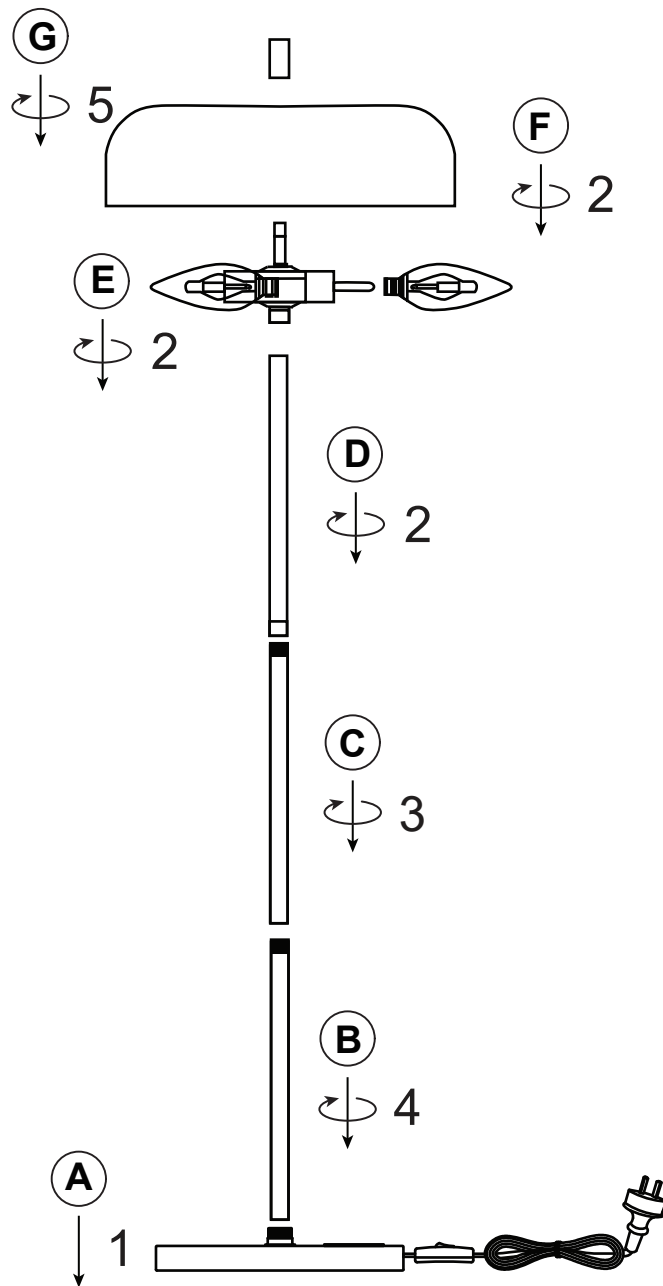

- 1 Place Lamp Base (A) on a flat surface.
- 2 Screw Head (F) and double bulb socket (E) onto Top Pole (D). Screw Top Pole (D) onto Middle Pole counterclockwise to tighten securely.
- 3 Screw Middle Pole (C) onto Lower Pole (B) and turn Lower Pole (B) counterclockwise to tighten securely.
- 4 Screw Lower Pole (B) onto lamp base (A) and turn lamp base (A) counterclockwise to tighten securely.
- 5 Thread Finial (G) onto double bulb socket Head (F) turn clockwise to tighten securely.
- 6 Insert a light bulb (not included) into double bulb socket (E) turn counterclockwise to tighten securely.
- 7 Insert the plug into your wall socket, turn on the switch and enjoy your Sachs Floor Lamp Base!

220-240V-50Hz E14 Max.40W

Bulb not included