
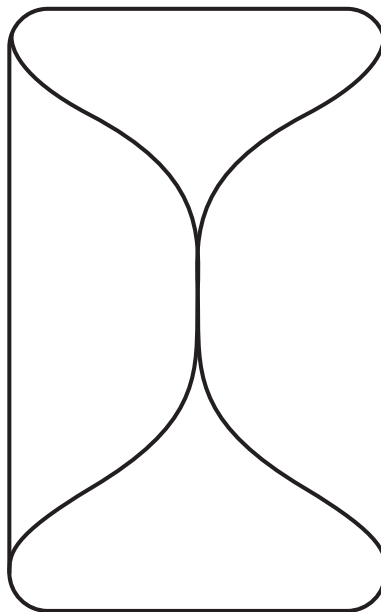


Assembly Instructions


COLBERT WALL SCONCE - SHORT

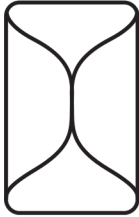

Component Checklist

REF	A	B	C	D
PART				
NAME	Wall Plug	Screw	Wall Bracket	Wall Sconce
QTY	4	4	1	1

Putting Me Together

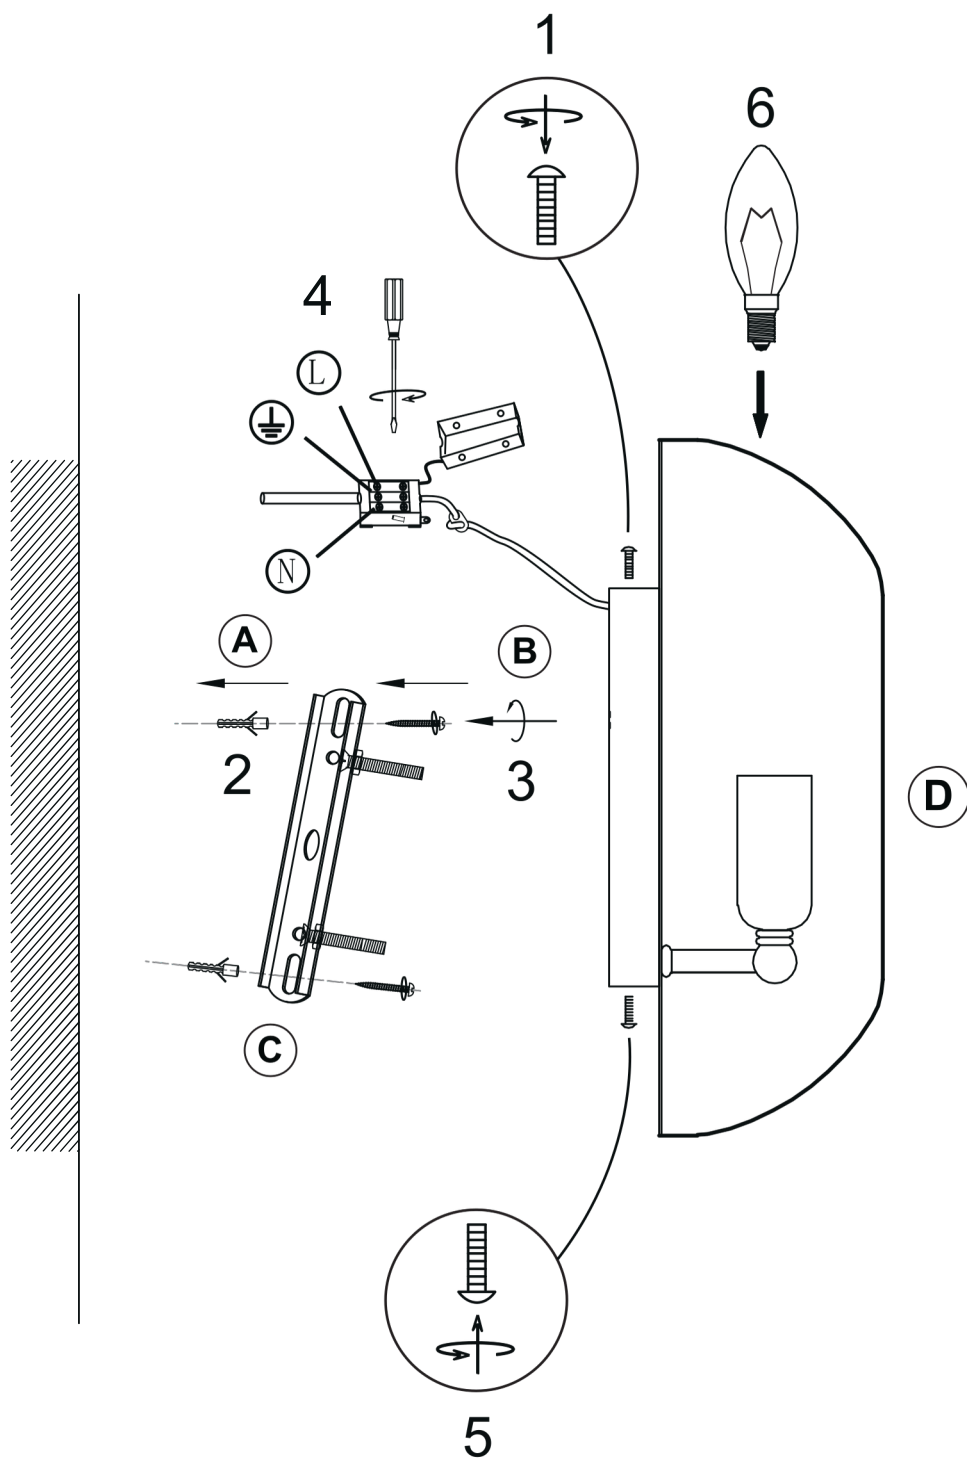

220-240V-50Hz E14 Max. 60W

Bulb not included



NOTE: THIS ITEM MUST BE INSTALLED BY A LICENSED ELECTRICIAN

WARNING: Switch off the main electrical supply at the main fuse box / circuit breaker before installation.

- ① Carefully remove all the parts from the box. Remove mounting bracket (C) from the back plate of wall scone by unscrewing the small screws attached to the side of the wall plate.
- ② **Due to its weight, this wall scone must be installed to a timber wall stud.**
 - Drill holes into the wall, in line with timber stud, according to the size of mounting bracket screws and in line with holes in mounting bracket (C).
 - Insert ceiling plug (A) into the drilled holes in timber wall stud.
- ③ Fix mounting bracket (C) to the timber wall stud using screws (B).
- ④ **ENSURE THE ELECTRICITY SUPPLY IS TURNED OFF.**
Connect the 3 power wires from the wall scone to the power wires in the wall.
 - Brown is the Live wire.
 - Blue is the Neutral wire.
 - Green/Yellow is the Earth wire.
- ⑤ Secure wall scone (D) to the mounting bracket (C) by screwing it back on with the small screws into the side of the mounting bracket.
- ⑥ Insert E14 globe into the lamp holder, screwing in until it is firm (globe not included).
- ⑦ Once globes are secured, turn the electricity supply back on and enjoy!