












Assembly Instructions


KARINA PENDANT - LARGE BRASS

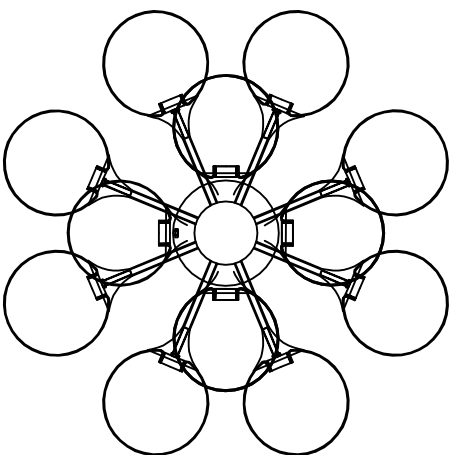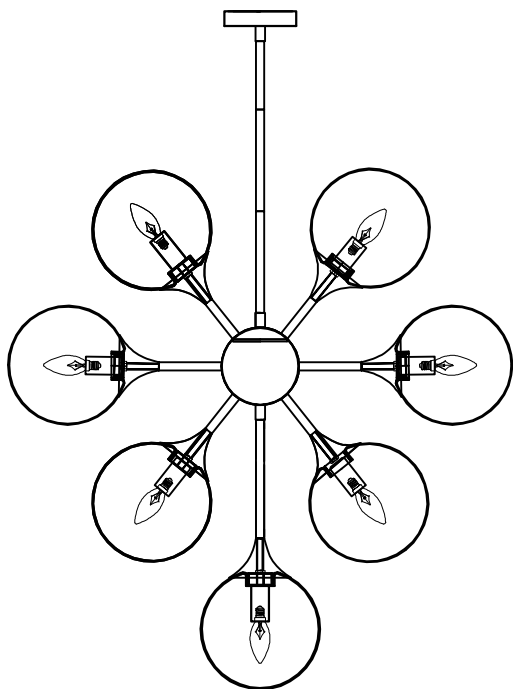

Component Checklist			
REF	PART	NAME	QTY
A		mounting bracket	1
B		expansion tubes	2
C		screws	2
D		screws	2
E		canopy	1
F		rods	1
G		rods	2
H		lamp body	1
I		glass globes	17


**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING :** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

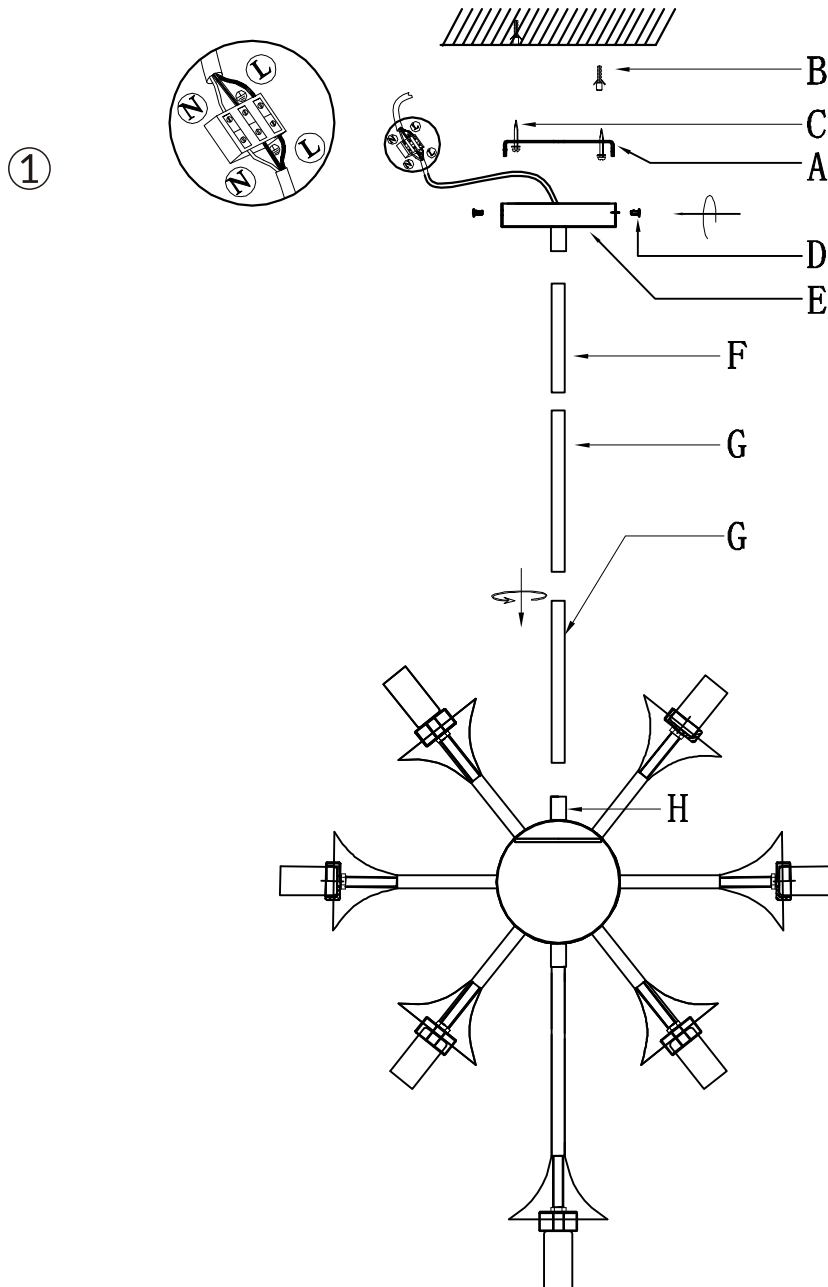


- Carefully remove all parts from the box
- According the height you need to decide how many rods (F)/(G) needed, and then put the cable through the rods till through the canopy (E) when install the rods (F)/(G) on the lamp body (H).
- Take the mounting bracket (A) from the canopy (E) by taking off the screws (D).
- Drill holes in the ceiling support beam based on the size of the screws (C) and in line with holes in the mounting bracket(A).
- Insert the expansion tubes (B) in the holes in the ceiling support beam, then fix the mounting bracket to the ceiling support beam with the screws (C).
- ENSURE THE ELECTRICITY SUPPLY IS TURNED OFF
- Connect the 3 power wires from the pendant to the power wires in the ceiling.
  - o Brown is the Live wire
  - o Blue is the Neutral wire
  - o Green/Yellow is the Earth wire
- Attach the canopy (E) to the mounting bracket (A) and secure with screws (D).

②

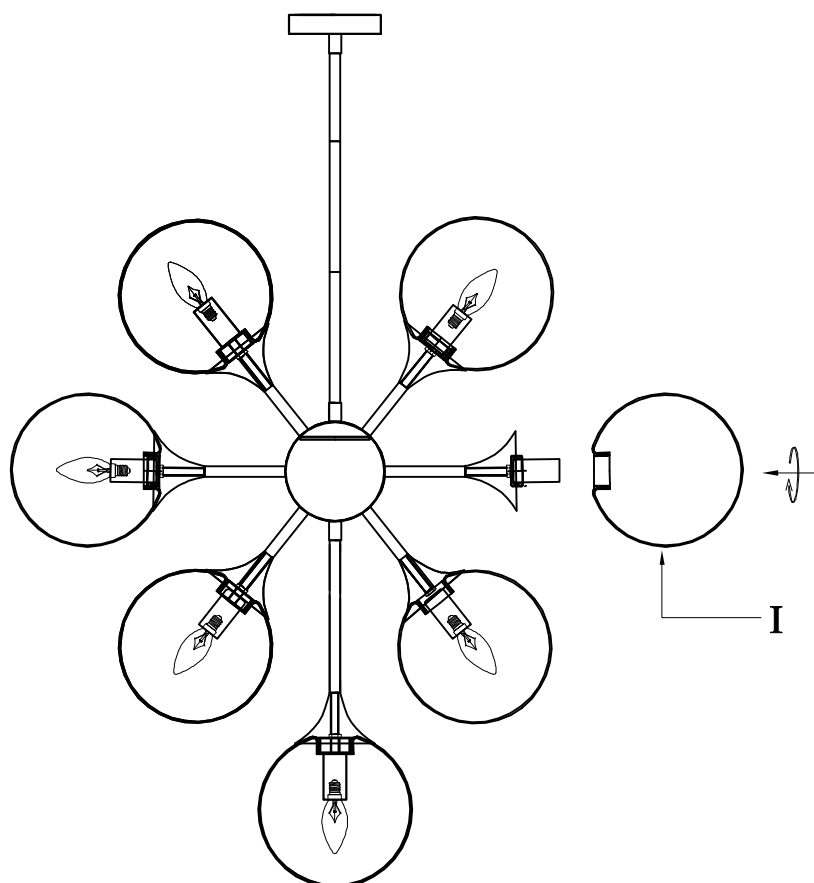

- Install the bulbs(not included), gently hold the bulb firmly and turn until secured.
- Install the glass globes (I) on the sockets from the TOP to the Bottom.

③

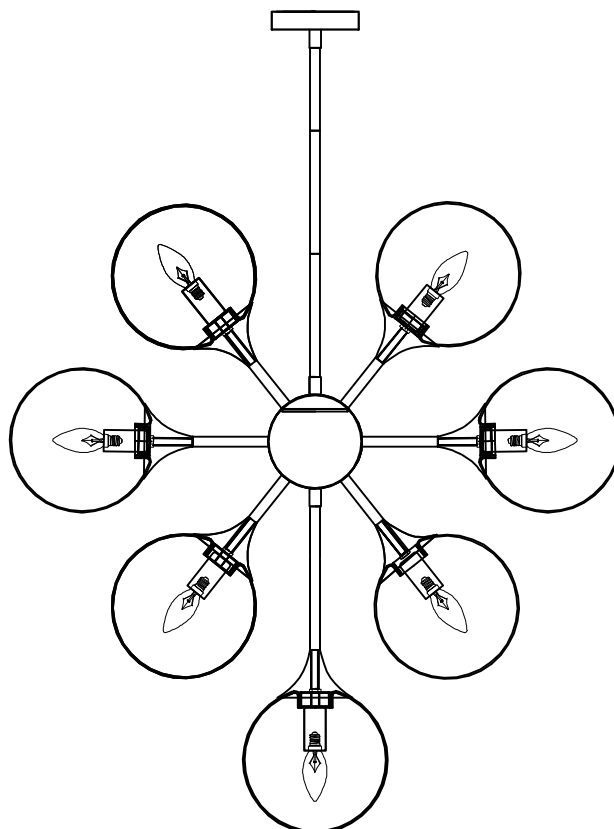

- Installation is complete, turn on power at fuse or circuit breaker.
- Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.